

WARNING

Danger of crushing due to incorrect operation of the hydraulic quickhitch system!

For system-specific reasons, the quickhitch can also be operated with other hydraulic functions. This can cause serious injury or death.

- Operate the hydraulic quickhitch only with the function **Raise stabilizer blade**.

Picking up an attachment

1. Hook up the quick coupler system **A** in the bolts **B** of the attachment receptacle.
2. Extend the bucket cylinder so that pin **C** of the attachment touches the quickhitch.
3. Check whether the attachment touches the quick coupler system with the bolt **C**.
4. Move the attachment inward completely.

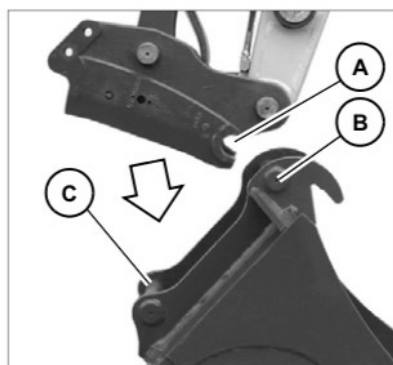


Fig. 131

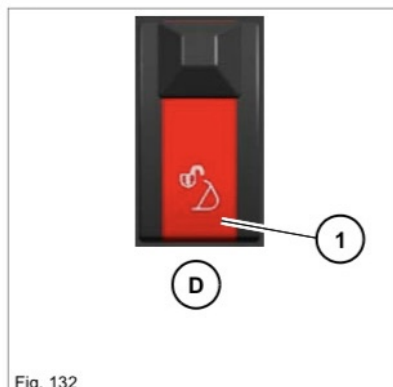


Fig. 132

5. Unlock switch **D** and press it to position **1**.
 - The quickhitch is enabled and the buzzer sounds.

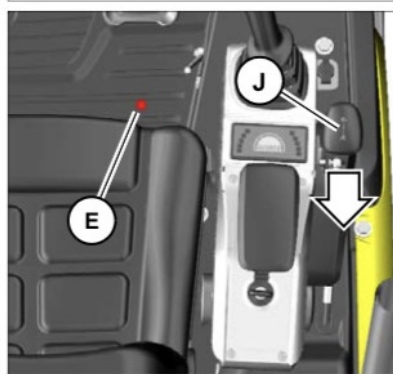


Fig. 133

6. Press and hold the foot-operated touch button **E** and at the same time pull back the **J** dozer blade lever.
 - The quickhitch opens.



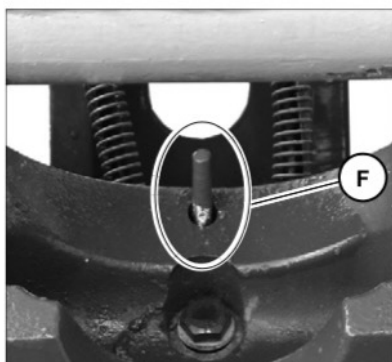


Fig. 134

- ➔ Check pin **F** must be fully extended.
- ➔ The attachment engages.

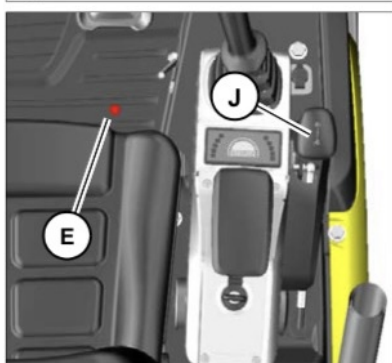


Fig. 135

7. Release the dozer blade lever **J** and foot-operated touch button **E**.
 - ➔ The quickhitch closes.

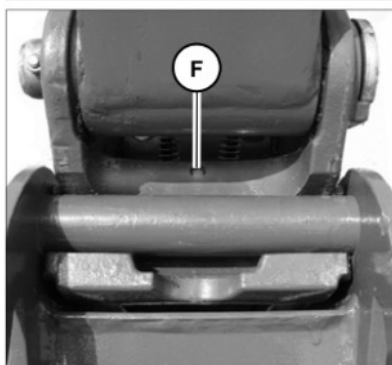


Fig. 136

- ➔ Check pin **F** must be fully retracted.



Fig. 137: Easy Lock switch

8. Press switch **D** to position **2**.
 - ➔ The quickhitch is disabled and the buzzer does not sound any longer.